

88 5181 301

Arts & Crafts Round Dining Table with Leaf

 
IMPORTANT NOTE

Carefully remove all the parts from the carton and put them individually on a soft cloth to prevent scratches or other damages occurring to the parts.


We have taken great care in the design of this product and request that you carefully and strictly follow our assembly instructions to ensure a completed product as it was designed.




Part List

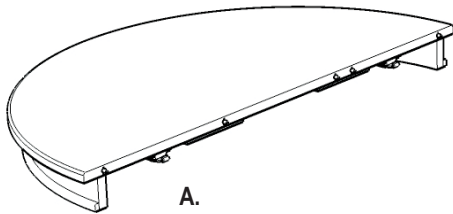

 
A.
Top
1 pc.

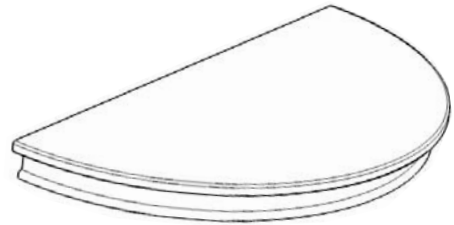

 
B.
Top
1 pc.

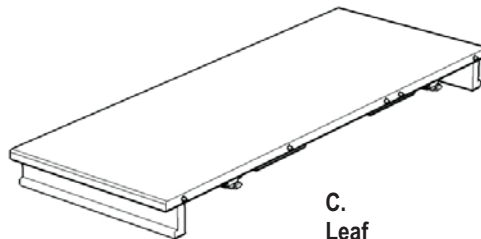

 C.
Leaf
1 pc.

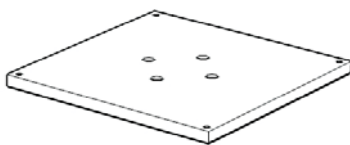


 D.
Connector Panel
1 pc.

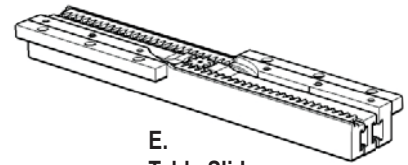

E.
Table Slide
2 pcs.

 Hardware List

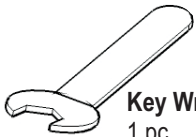

Key Wrench
1 pc.



Small
Hex Wrench
1 pc.



Flat Washer
(small)
12 pcs. (+1 extra)



Spring
Washer (small)
12 pcs. (+1 extra)



Wood Screw
12 pcs. (+1 extra)



Head Cap Bolt
(short)
4 pcs. (+1 extra)



Hex Wrench
1 pc.



 
Nut
12 pcs.
(+1 extra)



Flat Washer
12 pcs. (+1 extra)



Spring
Washer
12 pcs. (+1 extra)

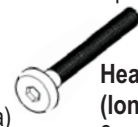

Head Cap Bolt
(long)
8 pcs. (+1 extra)

Tools required for assembly : **Phillips** screwdriver

Tools recommended for assembly : Level

Home Styles Consumer Assistance Line 888-680-7460 and 877-831-0319
servicedesk@homestyles-furniture.com

88 5181 302

Arts & Crafts

Round Dining Table with Leaf

 
IMPORTANT NOTE

Carefully remove all the parts from the carton and put them individually on a soft cloth to prevent scratches or other damages occurring to the parts.


We have taken great care in the design of this product and request that you carefully and strictly follow our assembly instructions to ensure a completed product as it was designed.



Part List

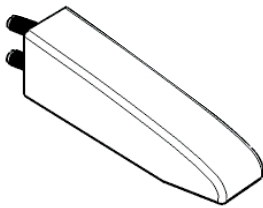

 F.
Leg
4 pcs.

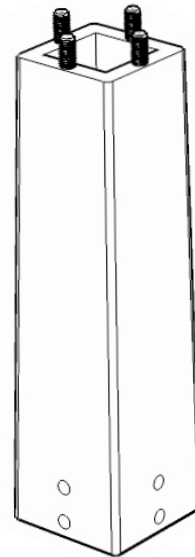

G.
Post
1 pc.

Also need the following from carton 88 5181 301

Part list in carton 88 5181 301

Top (A)	1 pc.
Top (B)	1 pc.
Leaf (C)	1 pc.
Connector Panel (D)	1 pc.
Table Slide (E)	2 pcs.

Hardware list in carton 88 5181 301

Key Wrench	1 pc.
Hex Wrench	1 pc.
Small Hex Wrench	1 pc.
Nut	13 pcs.
Flat Washer (small)	13 pcs.
Spring Washer (small)	13 pcs.
Flat Washer	13 pcs.
Spring Washer	13 pcs.
Wood Screw	13 pcs.
Head Cap Bolt (short)	5 pcs.
Head Cap Bolt (long)	9 pcs.

For assembly see instructions in carton 88 5181 301

Tools required for assembly : **Phillips** screwdriver

Tools recommended for assembly :Level

Home Styles Consumer Assistance Line 888-680-7460 and 877-831-0319
servicedesk@homestyles-furniture.com

IMPORTANT

- * Do not tighten up all the screws until each part is properly assembled.
- * You should keep Hex Wrench and Key Wrench in a safe place as you may need to tighten up the Head Cap Bolts in the future.
- * After assembly item must be level to work properly. Use the included adjustable levelers to level.

STEP 1

Attach Leg (F) to the Post (G), using Flat Washers, Spring Washers and Nuts. (see Figure 1)

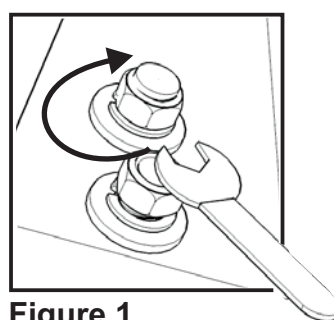 
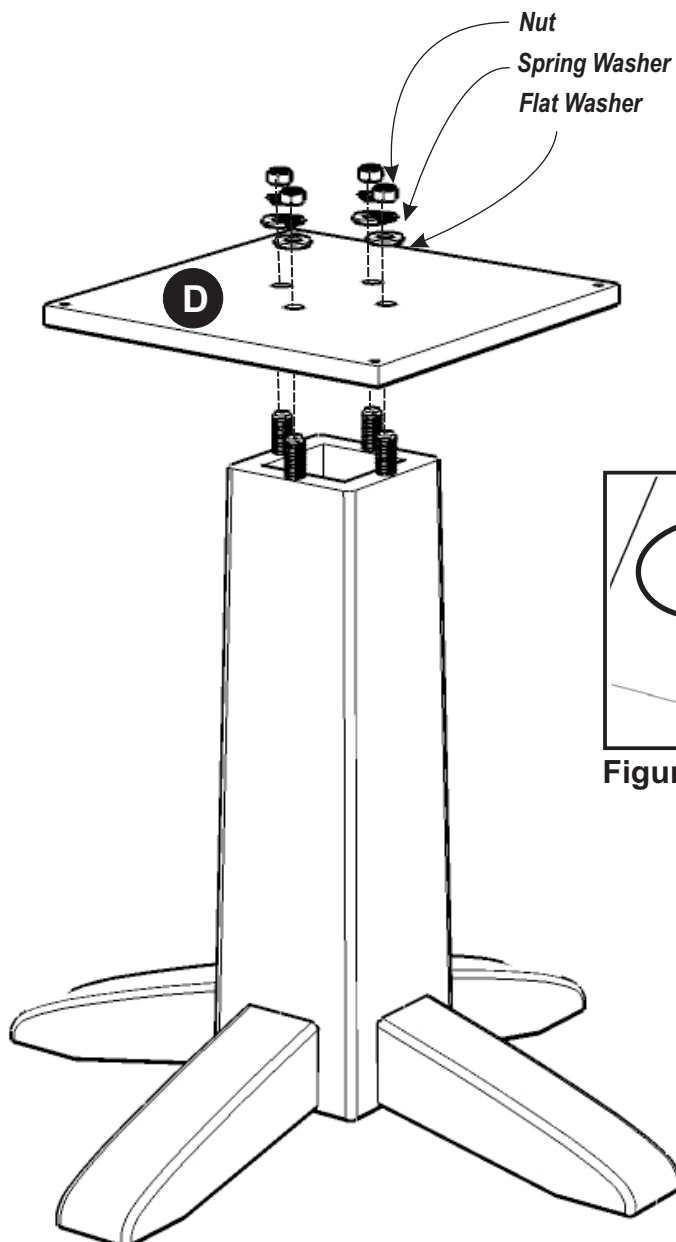 
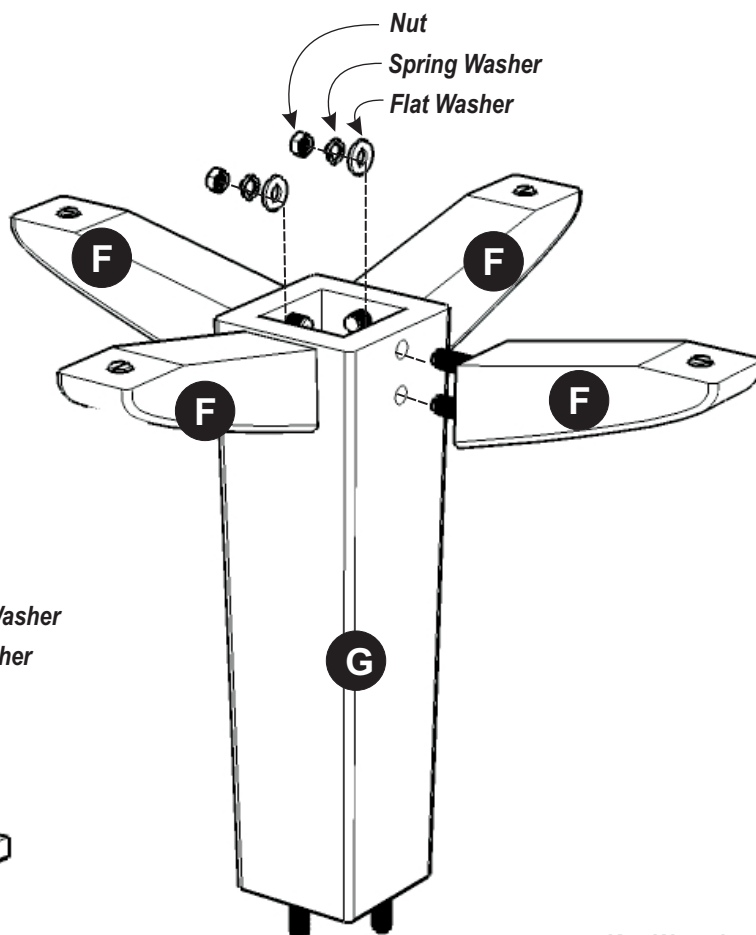 


Figure 1


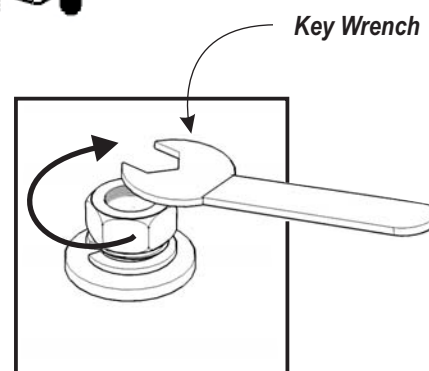 


Figure 2

STEP 2

 Attach Connector Panel (D) to the unit, using Flat Washers, Spring Washers and Nuts. (see Figure 2)

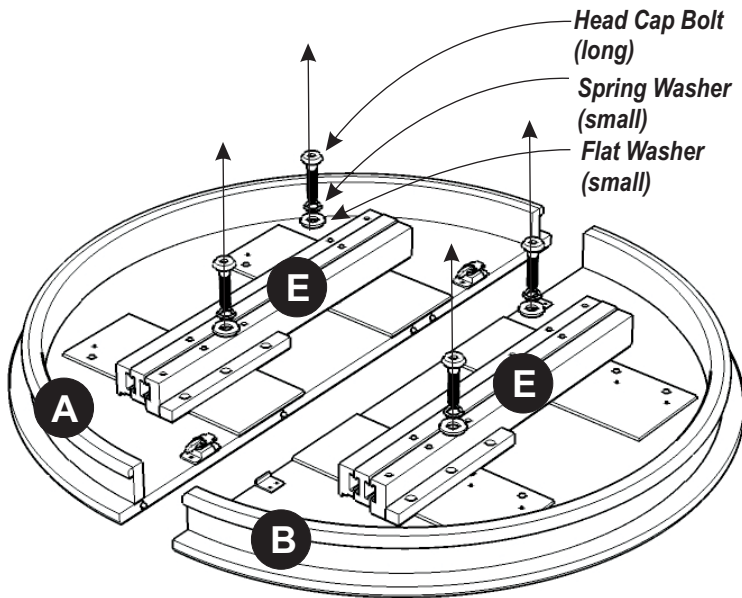


STEP 3

Place Top (A) and (B) face side down on a soft cloth.

Remove Table Slide (E) from their packing position by loosening and removing Head Cap Bolts(long), Spring Washers(small) and Flat Washers(small) using Hex Wrench.

Note: These 4 Head Cap Bolts(long), Spring Washers(small) and Flat Washers(small) will be used in Step 4.

 DO NOT DISCARD

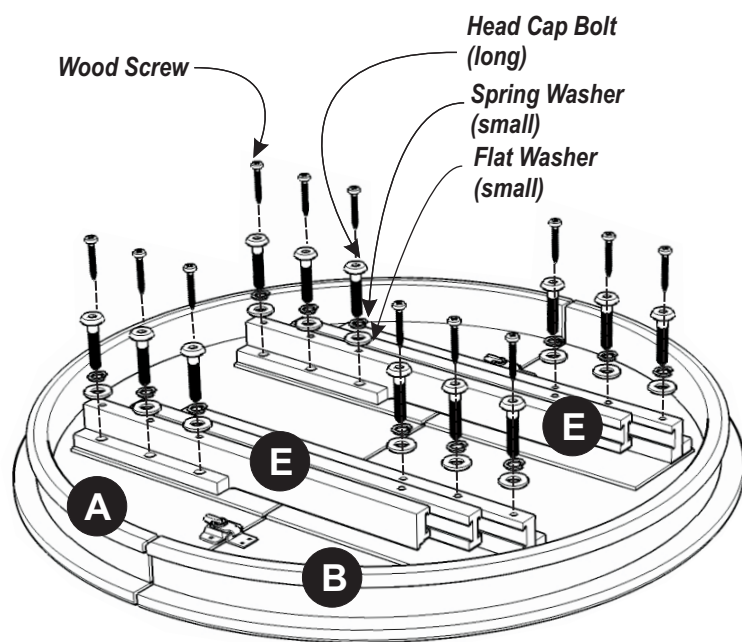

STEP 4

Attach Top (A) with (B), by aligning dowels with the holes and firmly pushing together.

Engage the locks by turning their handles clockwise 1/4 turn. (see Figure 3)

Attach Table Slide (E) to the unit, using Head Cap Bolts(long), Spring Washers (small), Flat Washers(small) and Wood Screws. (see Figure 4), (see Figure 5)

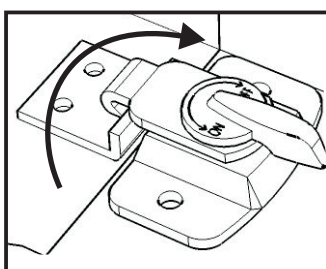 


Figure 3

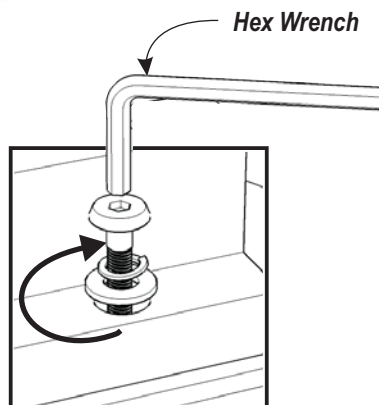 


Figure 4


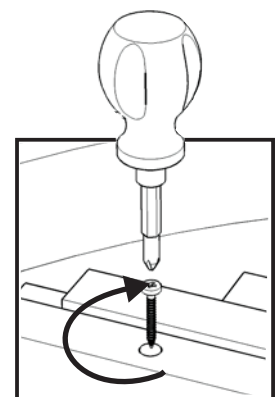 


Figure 5

STEP 5

Attach the base unit on to top unit with Head Cap Bolts(short), Spring Washers(small), Flat Washers(small).(see Figure 6)

 Turn the unit over to its' upright position.

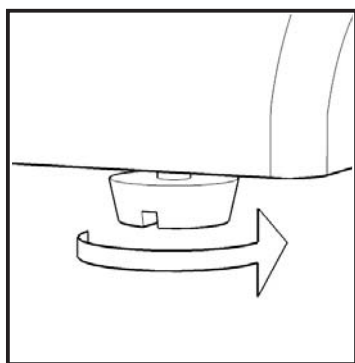

To level the unit, adjust the adjustable levelers on the bottom of legs.

Head Cap Bolt
(short)
Spring Washer
(small)
Flat Washer
(small)

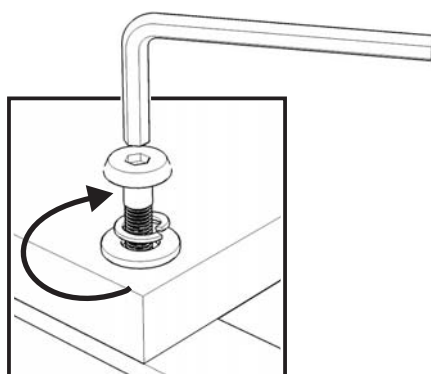 
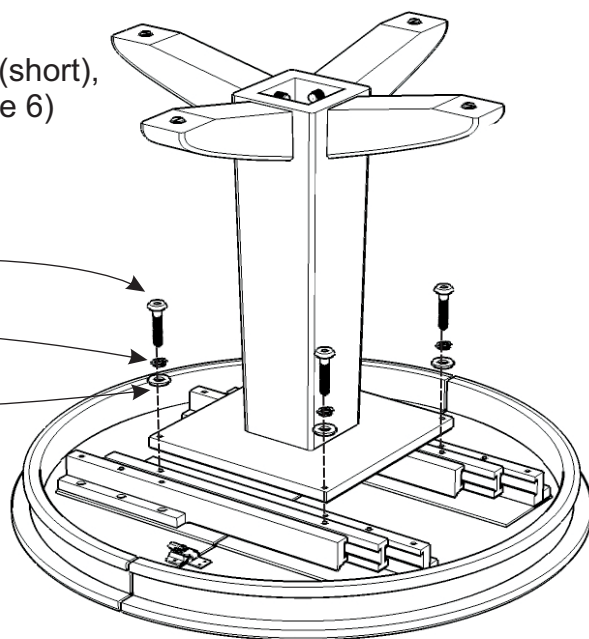 


Figure 6


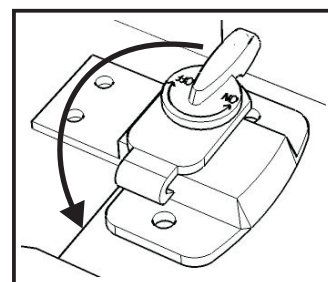 


Figure 7

 Adding the Leaf

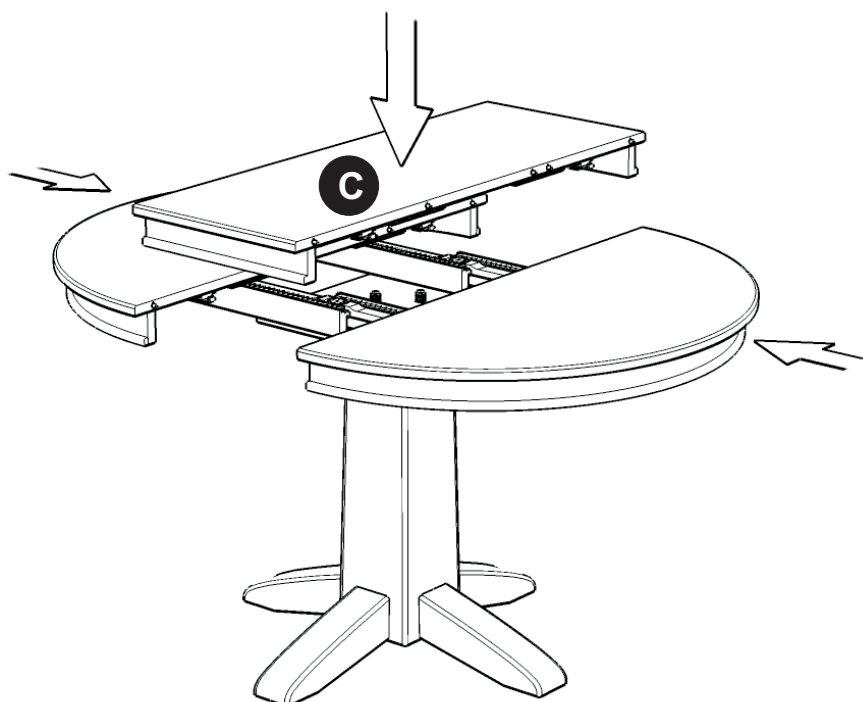

STEP 6

Disengage the lock by turning their handles counter-clockwise 1/4 turn. (see Figure 7)

Pull out both sides of the table, then place Leaf (C) in the unit as shown, aligning the dowels with the holes.

Push the half tops and leaf together firmly, then engage the locks by turning their handles clockwise 1/4 turn. (see Figure 3)