

# 88 5531 14 Bedford Back Panel


## IMPORTANT NOTE

Carefully remove all the parts from the carton and put them individually on a soft cloth to prevent scratches or other damages occurring to the wood parts.

We have taken great care in the design of this product and request that you carefully and strictly follow our assembly instructions to ensure a completed product as it was designed.




Casual Attire For Today's Home

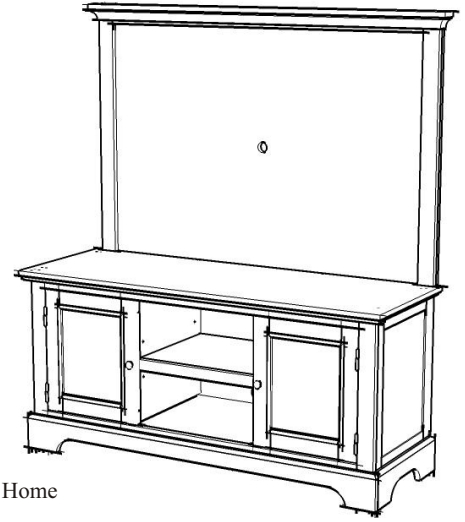

**THIS BACK PANEL IS FOR DECORATIVE PURPOSES ONLY**  
**Do not attach a television or anything else to the back panel.**


## Part List

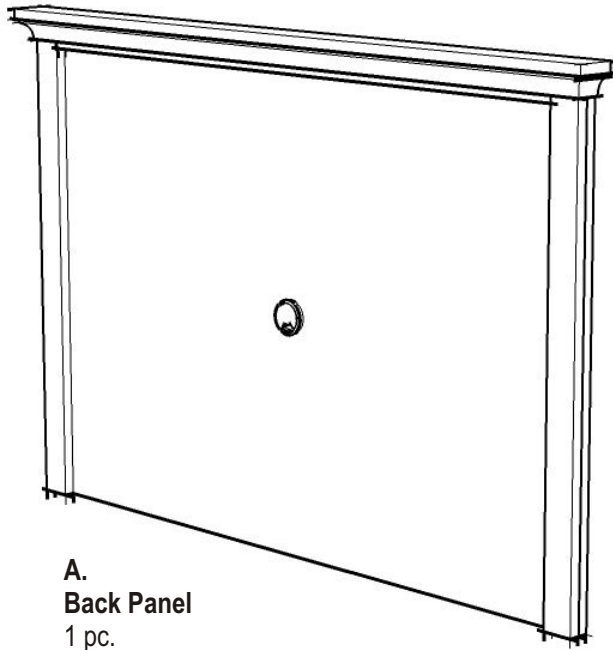


**A.**  
**Back Panel**  
1 pc.



**B.**  
**Batten**  
2 pcs.

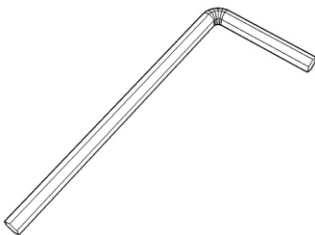

**Hex Wrench**  
1 pc.

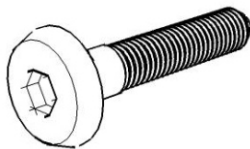


**Head Cap Bolt**  
4 pcs.(+1 extra)



**Spring Washer**  
4 pcs.(+1 extra)



**Flat Washer**  
4 pcs.(+1 extra)

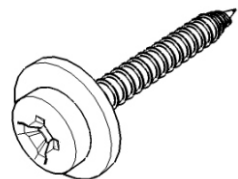

**Wood Screw**  
8 pcs.(+1 extra)

Tools required for assembly : Phillips screwdriver

**Home Styles Consumer Assistance Line 888-680-7460 and 877-831-0319**  
**[servicedesk@homestyles-furniture.com](mailto:servicedesk@homestyles-furniture.com)**

# Assembly Instructions

## IMPORTANT


Do not tighten up all the screws until each part is properly assembled.

## STEP 1

Attach the Battens (B) at the pre-drilled holes fo Back Panel (A) with Flat Washers, Spring Washers and Head Cap Bolts. (see figure 1)

Place the assembled unit onto the center console.

Insert Wood Screws into the pre-drilled holes of battens and tighten.

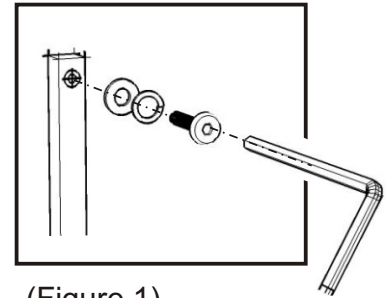

(Figure 1)

